



**Used within recess -
Cover screw at front**

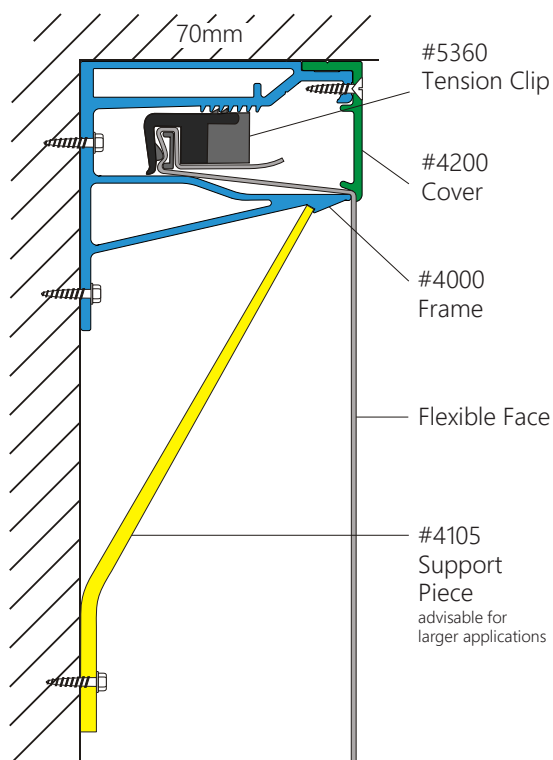

**Conventional Frame -
Cover screw at side**

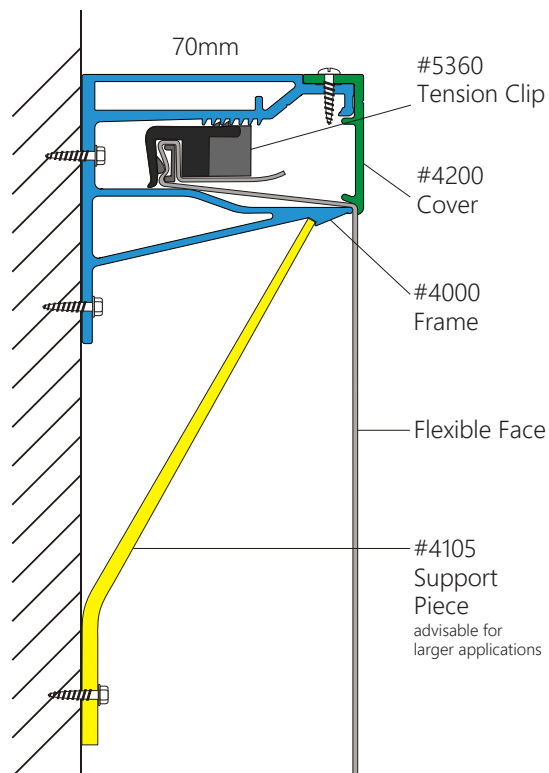

The Front Loader is a wall-mounted frame - simply fix direct to the wall. Where used conventionally, the cover screw can be fixed at the side. Where used within a recess, the cover screw needs to be fixed at the front. We advise using the Support Piece for larger applications and these should be no more than 1000mm apart.

Vinyl Cutting Sizes

Add 106mm to the height and width (53mm on each side) of the finished size of the frame #4000 ie. For a frame that has overall measurements of 3000 x 2000mm, the vinyl should measure 3106 x 2106mm.

